

# ETERNAL AIR RIFLES INSTRUCTIONS FOR USE





READAND UNDERSTAND ALLOFTHE CAUTIONS AND PROPER HANDLING PROCEDURES AND INSTRUCTIONS OUTLINED IN THIS BOOKLET BEFORE USING YOUR NEW FIREARM.

#### GUARANTEE CERTIFICATE

This product is under guarantee for 1 year as from the date of delivery against workmanship and production faults provided that it is used according to the "usage and maintenance instructions of the rifle" in the instructions for use and it is not repaired or interposed for any other reason by third parties except for the authorized service personnel of Eternal Arms.

For the processes applied to the products within the scope of guarantee; no charges will be requested under the name of workmanship fees, spare part fees or any other amounts. Time to repair is maximum 3 weeks as from delivering of the product to the service. In case that the product is broken down within the guarantee period, the elapsed repair time will be added to the guarantee period.

Transportation and cargo costs of the products sent for repair belong to the user. The documents which do not include the stamp of the selling agency or do have missing information are deemed to be invalid. The purchaser is deemed to accept the above mentioned conditions.

This section will be filled by the selling agency.

Model / Caliber : Serial number :

Name and Surname of the Purchaser:

Number of the Sales Invoice:

Date of Sales :

Stamp and Signature of the Selling Agency

Warning: Optics and similar accessories that are delivered together with the rifle are not included within the scope of the guarantee.

## www.eternalarms.com.tr

Thank you for choosing Strong Air Rifle.

PLEASE READ THIS BOOKLET CAREFULLY BEFORE YOU START TO USE YOUR AIR RIFLE.

#### SAFETY LOCK SYSTEM

- \*The rifle is safe if your rifle has a safety system
- \*You cannot pull the trigger in case that its safety is open and thus the rifle will not take fire.

WARNING: Keep the safety of your rifle in open position till your rifle is ready to shoot.

#### MICRO ADJUSTABLE BACK SIGHT

By courtesy of the micro adjustable back sight, the "height" and "right - left" adjustment of the target shooting point can be made. Micro adjustable back sight is adjusted with 0.1 mm steps and this will cause 1 mm deviation in a target at 10 meters away.

# LEFT-RIGHT ADJUSTMENT OF THE BACK SIGHT

\*If the pellet beats the left side of the target, rotate the right-left adjustment drum clockwise (Figure 1)

\*If the pellet beats the right side of the target, rotate the right-left adjustment drum counterclockwise (Figure 1)

# HEIGHT ADJUSTMENT OF THE BACK SIGHT

\*If the pellet beats above the target, rotate the height adjustment drum clockwise (Figure 1)

\*If the pellet beats below the target, rotate the height adjustment drum counterclockwise (Figure 1)

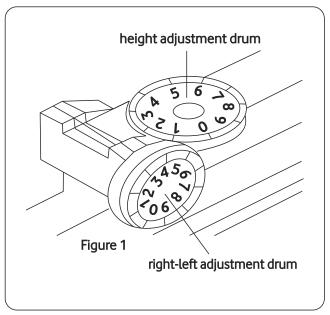
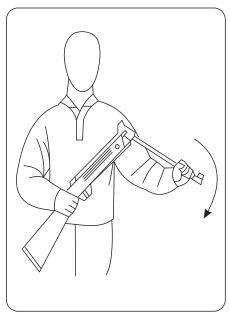


Figure 1

### INSTRUCTIONS FOR USING THE RIFLE

ASSEMBLY OF THE RIFLE: Hold the grip with your hand and by holding the barrel with your other hand, fold the barrel downwards till the rifle is set (Figures 2 and 3). When the rifle is set, a "click" sound will be heard.

**WARNING:** Do not keep the rifle in the set position for a long period of time. This will cause early fatigue of spring of the rifle and under-performance of your rifle.



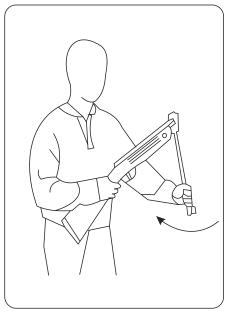


Figure 2

Figure 3

## PLACING THE PELLETS IN THE RIFLE

Put 1 pellet in your rifle as shown in Figure 4.

**WARNING:** If your rifle is 4.5 mm caliber, use a 4.5 mm pellet; if it is 5.5 mm caliber, use a 5.5 mm pellet.

Each air rifle pellet is for a single use only.

Thus do no use the same pellet more than once.

Use a fine-quality and fabricated pellet in order to get the best performance from the rifle.

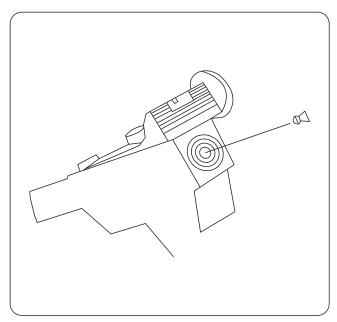


Figure 4


# Shooting with the rifle

\*Close the barrel completely (Figure 5). When the barrel is completely closed, a "click" sound will be heard.

\*Draw a bead on a safe target (\*) and if your rifle has a safety system, be ready to shoot by placing the safety to "closed" position (Figure 6).

\*Gently pull the trigger with your index finger and the rifle will shoot.

(\*)In order to draw a correct bead, hit the front sight to the middle of the back sight hole and draw a bead to the bottom of the target. The image that the shooter needs to see when a correct aiming is done is as shown in Figure 7.

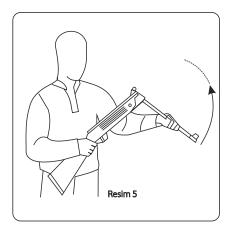

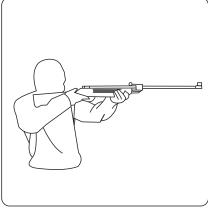


Figure 5

Figure 6

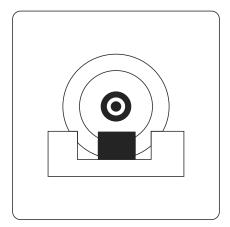


Figure 7

## MAINTENANCE AND LUBRICATION OF THE RIFLE

\*It is very important and required to lubricate periodically your rifle by using a rifle lubricant particularly if you did not use your rifle for a long time or have used your rifle under very dusty or moist environments.

- \*It is important to lubricate your air rifle once every 250 shoots.
- \*It is recommended to clean the barrel with a ramrod and a piece of cloth once every 500 shoots.
- \*The rifle should be empty and dried before every lubrication or cleaning process.
- \* Be always sure that the rifle and the barrel are clean.
- \*Do not use your rifle in case that the internal mechanism of your rifle is contaminated by some materials such as water, sand, mud etc. and take it to a rifle service for a complete cleaning.
- \*Dangerous conditions may occur if you keep your rifle clean and in a working condition.

#### SAFETY PRECAUTIONS

- \*If this air rifle has a pellet when it is set, if any, when its safety is closed and when the trigger is pulled, it will shoot.
- \*Before starting to use your air rifle, learn how it works and what are the required safety precautions.
- \*Although the rifle is empty, do not point it at any point which you have no shooting aim. Always keep the barrel of your rifle to a safe location.
- \*Never hold the rifle from its barrel and pull it towards yourself.
- \*Always point your rifle to safe targets. In order to prevent any injuries and damages, always think the locations where the pellet may go when you do not shoot the target.
- \*Be sure about your target before you shoot and do not shoot to the direction of voices.
- \*Never shoot towards water and the targets that may cause the bouncing of the pellet.
- \*If you will not shoot, never place the pellets in the rifle.
- \*Do not walk, run and jump with a full or dry rifle.
- \*When you carry your rifle, be sure that the rifle is empty and its safety is open.
- \*Do not disassemble the rifle and do not modify changes in the components of the rifle.
- \*User will be the sole responsible for all the injuries and damages that may arise from the incorrect, wrong, faulty and malicious usage of the rifle.



Eternal Arms İnşaat Silah San. İç ve Dış Tic. Ltd. Şti.

T: +90 542 530 53 01

Hacıakif Mahallesi Özdilek Caddesi No.86/B Beyşehir - Konya / TURKEY www.eternalarms.com.tr export@eternalarms.com.tr